

## Solving of the most common problems.

1. After thunderstorm or rain there is no electricity in part of the house.

Check if the switch no 18 on the main electrical board is in up position (all the switches on this board should be always in up positions)



2. There is no electricity in the pool house.

Check if the all switches on electrical board located on the side wall of the pool house are in up position. Check if the switches on board inside sauna are in up position.



3. There is no periodic cleaning of the swimming pool or you experience lazy flow from the jets.

- a. Check if all the switches on electrical board in the machinery pool compartment are in up positions. Cleaning periods are set automatically using the timer. (the switch on the timer should be set on clock picture). To start cleaning manually set timer switch in ON position.
- b. Check the pressure on the manometer of the sand filter. When operating, should be in the low green range.



If is to high make a BACKWASH procedure. ( see instructions Sand filter cleaning)



4. Low domestic water pressure.
  - a. Check if all switches on electric board on side wall of the pool house are in up position.



- b. Check water level in the water tank.



- c. Check if the Ca++ filter in pump compartment need a cleaning (lower part of the filter is full of debris). Make a cleaning due to opening of the side valve.



- d. Check if the water pump for domestic water is working correctly building periodically sufficient pressure of (max 3.5 bar).